



MANUAL TRAY SEALER

E 152

Easy to use and space-saving, this machine seals hermetic film that fits the tray perfectly. Economical thanks to its bi-format mould you can switch from one format to another quickly and easily..

Maximum tray size: 200 x 160 mm



Bi-format mould

E 152

Uses



Catering professions



Groceries & supermarkets



Includes: adjustable bi-format mould

2 possible sealing formats: 195 x 135 mm or 95 x 135 mm
ref. plate PLBIE152CLT



- ✓ Compact and easy to use, for sealing small and medium-sized trays up to a maximum size of 200 x 160 mm.
- ✓ Double handle system for easy and regular sealing.
- ✓ Option: made-to-measure moulds to fit your trays format (*please contact us*).
- ✓ Stainless steel structure for easy cleaning and better resistance to disinfectants (reduces retention zones).



1 year warranty⁽¹⁾

⁽¹⁾Except wear parts












Compatible materials
Bio-sourced or compostable



Compliance with
CE standards

FOOD range

TECHNICAL DATA

MODEL									
E 152	19 x 44 x 46 cm	160 mm (max)	200 mm (max)	potentiometer	7 kg	500 W	230 V 50/60 Hz	195 x 135 mm 95 x 135 mm	1 pose 1 pose

* Dimensions open cover

EQUIPMENT

Manual closure with double handles

Bi-format mould plate :

- 195 x 135 mm
- 95 x 135 mm


Temperature control by potentiometer

Integrated roll holder


ADAPTED TOOLS

MOULD


Practical! A single mould with 2 formats, easy to adjust thanks to the sliding bar:

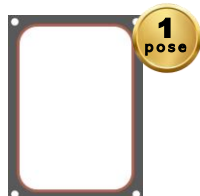

Standard size
195 x 135 mm

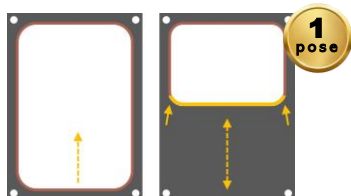

Reduced size
95 x 135 mm

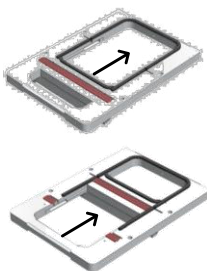


TRAY

Suitable tray formats:




Tray range	Dimensions	Max. tray height
CLTP	195 x 135 mm	130 mm
CLTP	95 x 135 mm	130 mm


OPERATING PRINCIPLE

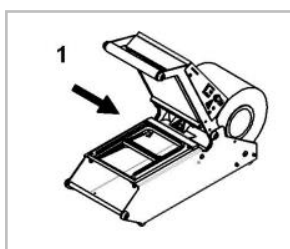


Place your tray and its contents on the mould.

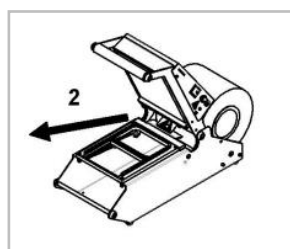


Unroll the film over the tray.

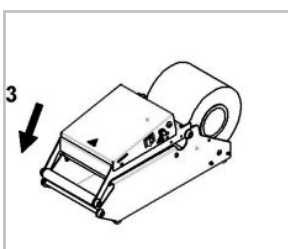

Lower the handle to cut and seal the film.

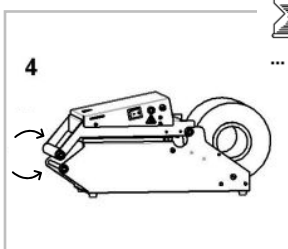

Keep the 2 handles pressed together for a few seconds.

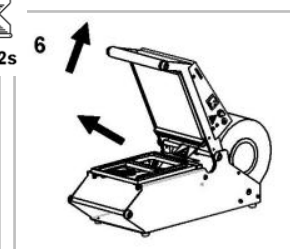

The tray is sealed and can be removed.

Need more information?



Contact the sales department: +33 (0)4 74 00 59 54